



# Asus EeePC 1015PX HDD and Cooling Fan Replacement

Follow this guide to replace the cooling fan, and access the compartment HDD

Written By: Smilzo






## Step 1 — cooling fan



- remove battery

## Step 2

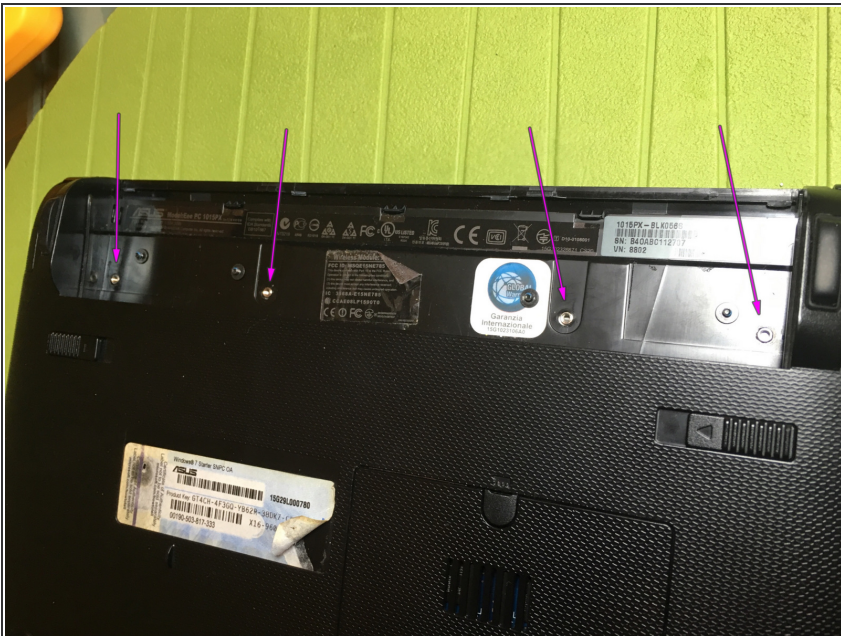

- Unscrew the four screws, purple arrow

## Step 3



- use a screwdriver to press in the 2 slots to unlock the keyboard hooks



## Step 4



- leverage points in the 2 side to release the joints
- with a fine instrument unhook the keyboard along the perimeter




## Step 5

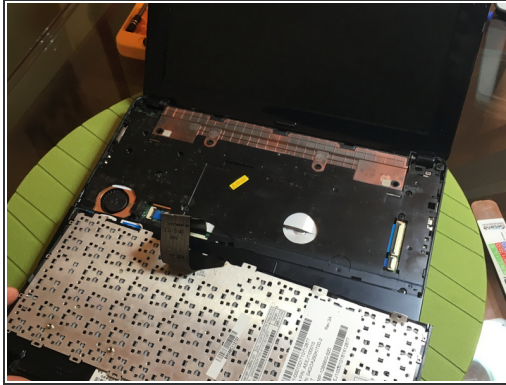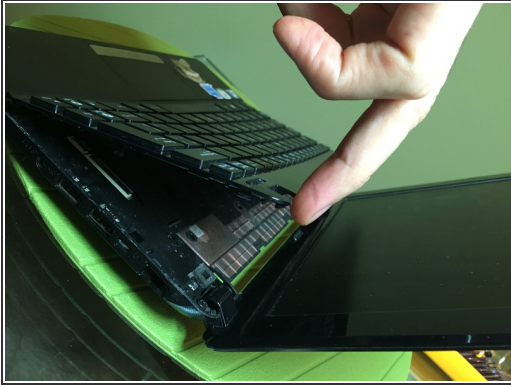


- unhook the keyboard
- Unhook flat connection by opening the 2 side latches blacks

## Step 6

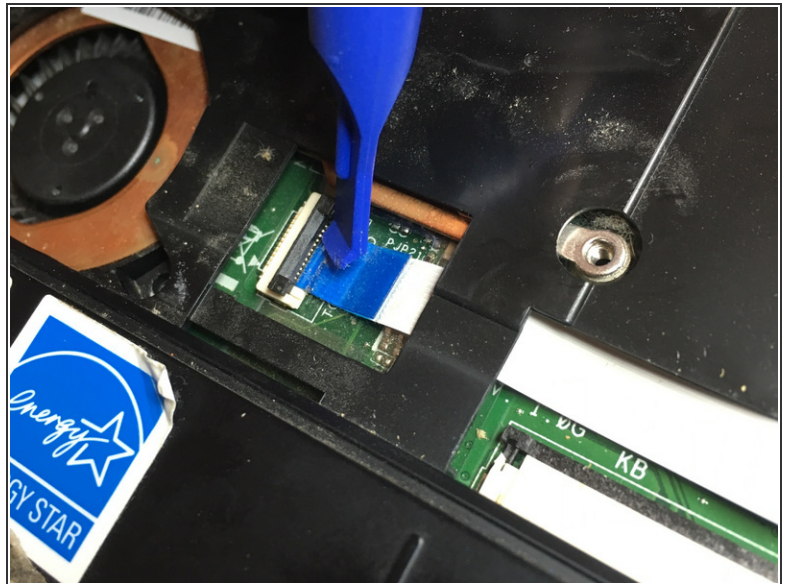



- release the two flat

## Step 7

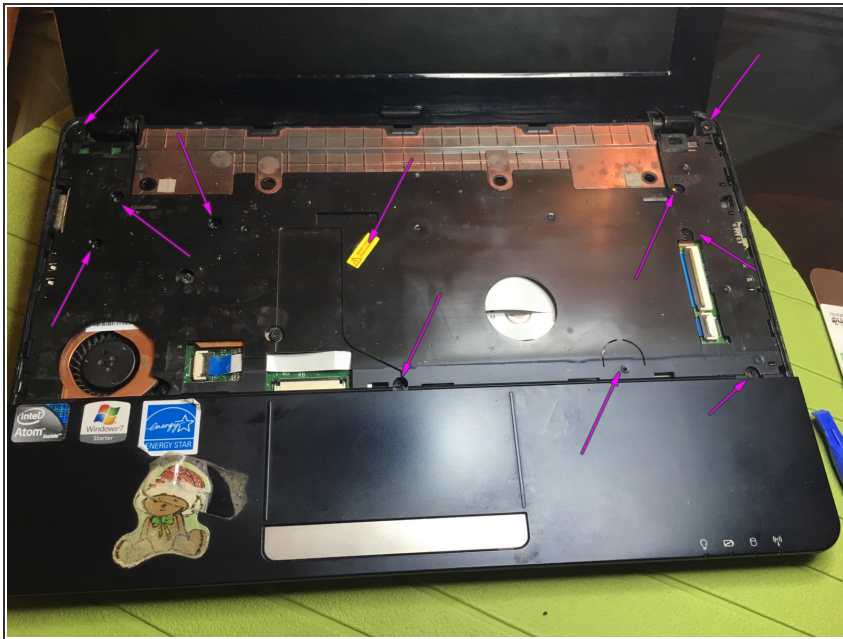

- remove the screws, including that under the yellow sticker


## Step 8

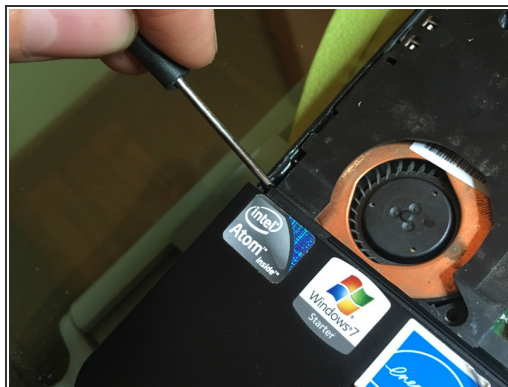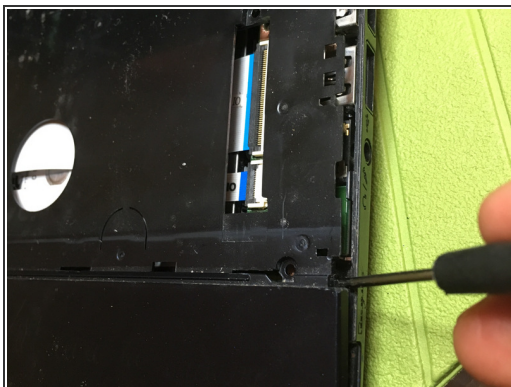

- release levering in 2 points and with a fine instrument release the trackpad on the perimeter block



## Step 9

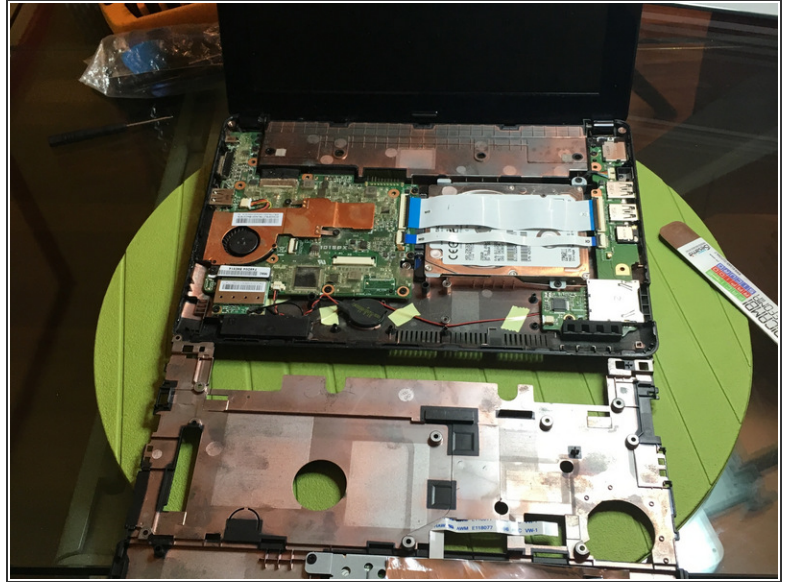

- release and remove mouse lock

## Step 10



- remove the heat sink screws and air fan
- Unhook flat air fan

## Step 11



- thoroughly clean the old paste Arctic cooling on the processor and heatsink
- before reassembling put the new Arctic pasta
- To replace or remove HDD, unhook the 2 flat (purple arrow). Remove two screws (yellow arrow)

Per rimontare il dispositivo, segui queste istruzioni in ordine inverso.

This document was last generated on 2017-06-18 03:33:03 AM.